

Coreo Plasma Bundle Features

Included with machine - Basic Machine Operation (BMO)			
Connect: Get started quickly	<p>Connect Includes:</p> <ul style="list-style-type: none"> -Guided setup through a simple license/dongle installation -Easy connect and instant access to MultiCam Machines from a user friendly launch window -Provide Convenient access to other Coreo programs -Powerful trouble shooting tools with controller support download function 		
Command: Computer graphical operator interface to execute machine files	<p>Command Basic Includes:</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> -Opens CNC, Images -Graphical job preview on computer or keypad -Graphical Proximity restart </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> -Access job listings and execute directly from computer or keypad -Ability to queue multiple CNC job files from one job execution -Library of recommended tools, speed, feeds of common materials </td> </tr> </table>	<ul style="list-style-type: none"> -Opens CNC, Images -Graphical job preview on computer or keypad -Graphical Proximity restart 	<ul style="list-style-type: none"> -Access job listings and execute directly from computer or keypad -Ability to queue multiple CNC job files from one job execution -Library of recommended tools, speed, feeds of common materials
<ul style="list-style-type: none"> -Opens CNC, Images -Graphical job preview on computer or keypad -Graphical Proximity restart 	<ul style="list-style-type: none"> -Access job listings and execute directly from computer or keypad -Ability to queue multiple CNC job files from one job execution -Library of recommended tools, speed, feeds of common materials 		
Report:	<p>Provides Ability to:</p> <ul style="list-style-type: none"> -Calendar of job history 		

Chart a: Coreo Plasma Bundles				
Coreo Module	Feature Bundles			
	Three Axis			Advanced w/Bevel
	Coreo BMO	Basic	Advanced	
Connect	✓	✓	✓	✓
Report	✓	✓	✓	✓
Command	<i>Basic</i>	✓		
	<i>Advanced</i>		✓	✓
Build	<i>Plasma Advanced Hole</i>		Included with Hardware	
	<i>Basic (Block Nesting)</i>		✓	✓
	<i>Random Shape Nesting</i>			✓
	<i>Bevel Control</i>			✓
Design-E		✓	✓	✓
Part Number:		C5.0-P3B-K	C5.0-P3A-K	C5.0-P5U-K

Chart b: Plasma Bundle Features

Coreo Bundle Descriptions	Feature Bundles			
	Three-Axis			Advanced w/Bevel
	BMO	Basic	Advanced	
Part Number:		C5.0-P3B-K	C5.0-P3A-K	C5.0-P5U-K
Connect: <i>(Get started quickly)</i>	Connect Includes: -Guided setup through a simple license/dongle installation -Easy connect and instant access to MultiCam Machines from a user friendly launch window -Provide Convenient access to other Coreo programs -Powerful trouble shooting tools with controller support download function			
Design-E: <i>(Quickly and easily design parts)</i>	N/A	Design-E Includes: Full 2D CAD and Editing Capabilities: -Ability to scale, size, fit, & align -Multiple Fonts with Text Tools editing -Create and Edit Shapes, Objects and Graphics. Node editing and smoothing tools. Black & White Vectorization -Comprehensive Import Filters: AI, EPS, PDF, DXF allowing seamless interface import from multiple drawing packages		
Build: Converts CAD drawing into CAM files 1. Import 2. Tool Path 3. Nest 4. Output	N/A	Build Basic Adds: -Import multiple CAD Files at one time -Multiple use Shape Library -Import Job parts (txt, csv) -Job Run Time Estimation -Job Cost Quoting -Part Labeling -Included Material Process Libraries Tool Path- -Multiple Materials per Job -Multiples Process per Job -Multiple Process per Contour Nesting- -Auto Block Shape Nesting	Build Advanced Adds: -Import AutoCAD DWG files -Common-Line Cutting -Array-Line Cutting -Material Sheet Inventory -Sheet Remnant Tracking Nesting- -Random Shape Nesting	
Advanced Bevel:	(Not Available in these bundles)			Bevel Includes: -Ability to shape and cut beveled edge
Plasma Advanced Hole:	N/A	Advanced Plasma: -Include with HPR/XPR Plasma units. -Integrated True-Hole support.		
Command Basic: Computer graphical operator interface to execute machine files	Command Basic Includes: -Opens G code & Common Images -Graphical Job Preview -Graphical Proximity restart -Access Job listings and execute directly from computer or keypad -Ability to queue multiple CNC job files from one job execution -Library of recommended tools, speed, feeds of common materials			
Command Advanced:	N/A	Command Advanced Adds: -Import AutoCAD DXF, AI, PDF, UCD, & XML File -Graphical Contour Editor -Mobile App Support -Generate Tool Paths -Email Notification -Assign Processes		
Report:	Provides Ability to: -Calendar of job history			