

## Coreo Router Bundle Features

Included with machine - Basic Machine Operation (BMO)			
<b>Connect:</b> Get started quickly	<p><b>Connect Includes:</b></p> <ul style="list-style-type: none"> <li>-Guided setup through a simple license/dongle installation</li> <li>-Easy connect and instant access to MultiCam Machines from a user friendly launch window</li> <li>-Provide Convenient access to other Coreo programs</li> <li>-Powerful trouble shooting tools with controller support download function</li> </ul>		
<b>Command:</b> Computer graphical operator interface to execute machine files	<p><b>Command Basic Includes:</b></p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>-Opens CNC, Images</li> <li>-Graphical job preview on computer or keypad</li> <li>-Graphical Proximity restart</li> </ul> </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li>-Access job listings and execute directly from computer or keypad</li> <li>-Ability to queue multiple CNC job files from one job execution</li> <li>-Library of recommended tools, speed, feeds of common materials</li> </ul> </td> </tr> </table>	<ul style="list-style-type: none"> <li>-Opens CNC, Images</li> <li>-Graphical job preview on computer or keypad</li> <li>-Graphical Proximity restart</li> </ul>	<ul style="list-style-type: none"> <li>-Access job listings and execute directly from computer or keypad</li> <li>-Ability to queue multiple CNC job files from one job execution</li> <li>-Library of recommended tools, speed, feeds of common materials</li> </ul>
<ul style="list-style-type: none"> <li>-Opens CNC, Images</li> <li>-Graphical job preview on computer or keypad</li> <li>-Graphical Proximity restart</li> </ul>	<ul style="list-style-type: none"> <li>-Access job listings and execute directly from computer or keypad</li> <li>-Ability to queue multiple CNC job files from one job execution</li> <li>-Library of recommended tools, speed, feeds of common materials</li> </ul>		
<b>Report:</b>	<p><b>Provides Ability to:</b></p> <ul style="list-style-type: none"> <li>-Calendar of job history</li> </ul>		

Chart a: Coreo Router Bundles			
Coreo Module	Feature Bundles		
	Three Axis		
	Coreo BMO	Basic	Advanced
<b>Connect</b>	✓	✓	✓
<b>Report</b>	✓	✓	✓
<b>Command</b>	<i>Basic</i>	✓	
	<i>Advanced</i>		✓
<b>Build</b>	<i>Route Toolpath Plus</i>		✓
	<i>Basic (Block Nesting)</i>		✓
	<i>Random Shape Nesting</i>		✓
<b>Design-E</b>		✓	✓
<b>Advanced Knife</b>	Included with Hardware		
<b>Vision</b>	Included with Hardware		
<b>Part Number:</b>		C5.0-RB-K	C5.0-RA-K

**Chart b: Router Bundle Features**

Coreo Bundle Descriptions	Feature Bundles		
	Three-Axis		
	BMO	Basic	Advanced
<b>Part Number:</b>		C5.0-RB-K	C5.0-RA-K
<b>Connect:</b> <i>(Get started quickly)</i>	<b>Connect Includes:</b> -Guided setup through a simple license/dongle installation -Easy connect and instant access to MultiCam Machines from a user friendly launch window -Provide Convenient access to other Coreo programs -Powerful trouble shooting tools with controller support download function		
<b>Design-E:</b> <i>(Quickly and easily design parts)</i>	N/A	<b>Design-E Includes:</b> <b>Full 2D CAD and Editing Capabilities:</b> -Ability to scale, size, fit, & align -Multiple Fonts with Text Tools editing -Create and Edit Shapes, Objects and Graphics. Node editing and smoothing tools. Black & White Vectorization -Comprehensive Import Filters: AI, EPS, PDF, DXF allowing seamless interface import from multiple drawing packages	
<b>Build:</b>  <b>Converts CAD drawing into CAM files</b> 1. Import 2. Tool Path 3. Nest 4. Output	N/A	<b>Build Basic Adds:</b> -Import multiple CAD Files at one time -Multiple use Shape Library -Import Job parts (txt, csv) -Job Run Time Estimation -Job Cost Quoting -Part Labeling -Included Material Process Libraries <b>Tool Path-</b> -Multiple Materials per Job -Multiples Process per Job -Multiple Process per Contour <b>Nesting-</b> -Auto Block Shape Nesting	<b>Build Advanced Adds:</b> -Import AutoCAD DWG files -Material Sheet Inventory -Sheet Remnant Tracking <b>Nesting-</b> -Random Shape Nesting
<b>Route Toolpath Plus:</b>	N/A	<b>Advanced Router:</b> -Support for continuous multi-pass, bridging and tabbing, onion skin, pocketing, rough pass. -Optimize gang drills, part hold and vacuum.	
<b>Advanced Knife:</b>	N/A	<b>Advanced Knife:</b> -Integrated knife control allowing stop-short, cut-back, and angle knife control.	
<b>Command Basic:</b>  <b>Computer graphical operator interface to execute machine files</b>	<b>Command Basic Includes:</b> -Opens G code & Common Images -Graphical Job Preview -Graphical Proximity restart -Access Job listings and execute directly from computer or keypad -Ability to queue multiple CNC job files from one job execution -Library of recommended tools, speed, feeds of common materials		
<b>Command Advanced:</b>	N/A	<b>Command Advanced Adds:</b> -Import AutoCAD DXF, AI, PDF, UCD, & XML File -Graphical Contour Editor -Mobile App Support -Generate Tool Paths -Email Notification -Assign Processes	
<b>Vision:</b>	N/A	<b>Vision:</b> -Support for media alignment, via registration marks. -Support for barcode reading.	
<b>Report:</b>	<b>Provides Ability to:</b> -Calendar of job history		